



Simple care quidelines

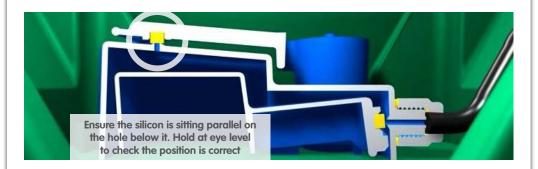

Ensuring that the AQUAvalve floods and drains correctly

- Making sure your AQUAvalve floods and drains correctly is simply achieved and only takes a few seconds.
- Hold the AQUAvalve at eye level so that you can see the silicon fitted to the top float resting on the hole below it.
- The silicon must create a tight seal when touching the hole.
- If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicon, drop the float and hold at eye level again. Repeat the procedure if necessary.

 Care and maintenance



The AQUAvalve is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.

At this point is it advisable to remove the silicones to avoid them being lost.

It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve nozzle, this will remove any lime scale build up that may have occurred during the growing season.

Blowing through the AQUAvalve nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve nozzle.

This will potentially damage the AQUAvalve beyond repair.

Your 80Pot system set-up guidelines



Allow your
Plants
to establish
before turning your
system on.



80Pot system contents

- 1x 750 litre FlexiTank
- 80x 1Pot tray and lid
- 80x 15 litre pot
- 80x AQUAvalve
- 1x 16mm click-fit tank adapter and filter
- 4x 16mm inline tap

- 3x 16mm tee connector
- 40x 16 6mm cross connector
- 30 metres of 16mm pipe
- 40 metres of 6mm pipe
- 80x marix disc
- 80x root control disc

Plan views and options

Suggested layout System requires minimum 750 litre FlexiTank (supplied) 750 ltr FlexiTank Elevate tank ***** * 150mm from floor to maintain gravity pressure **AQUAvalve** 16mm cross connector 16mm click-fit tank adaptor & filter 16mm - 6mm cross connector 6mm pipe 16mm in-line tap 16mm pipe

Advice

- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 7 to 10 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your tank to a minimum of 150mm above the highest AQUAvalve and re-fill the tank when there is approximately a 1/3 of the solution left - NEVER ALLOW THE TANK TO RUN EMPTY.
- For best results, we recommend mineral fertilisers. Do not use organic fertilisers, as they have a tendency to block small pipe work.
- Clean all substrate from the bottom and sides of the pots before placing in each tray.
 This will ensure your system is clean from the start.
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles.

1Pot dimensions







1Pot setup instructions



Put black marix disc in pot



Fill pot with medium and pot up plants.

Water through pot and allow to drain outside the tray.



Remove collar

Push 6mm pipe through
collar and attach to
AQUAvalve nozzle

Rescrew collar - DON'T
overturn... when you
feel it grip STOP



Connect AQUAvalve so 'half moon' is on T section in the tray



Position tray so it is level Insert root control disc **Gold face up**



Cut 6mm/16mm pipe to appropriate length



According to the size of your system connect your 6mm/16mm pipe to relevant fitting or tank...



Place pot in the tray, make sure it is **CLEAN!**

Place lid over valve onto tray

Using your front instruction sheet, repeat the module set up instructions for the number of trays.

Allow your plants to establish for 7-10 days before turning system on